

PM-HDTL SHELVING FEET ASSEMBLY

Installation Instructions


Tools required

(1) 7/16" wrench or socket with ratchet.

Manpower required

2 people

HARDWARE

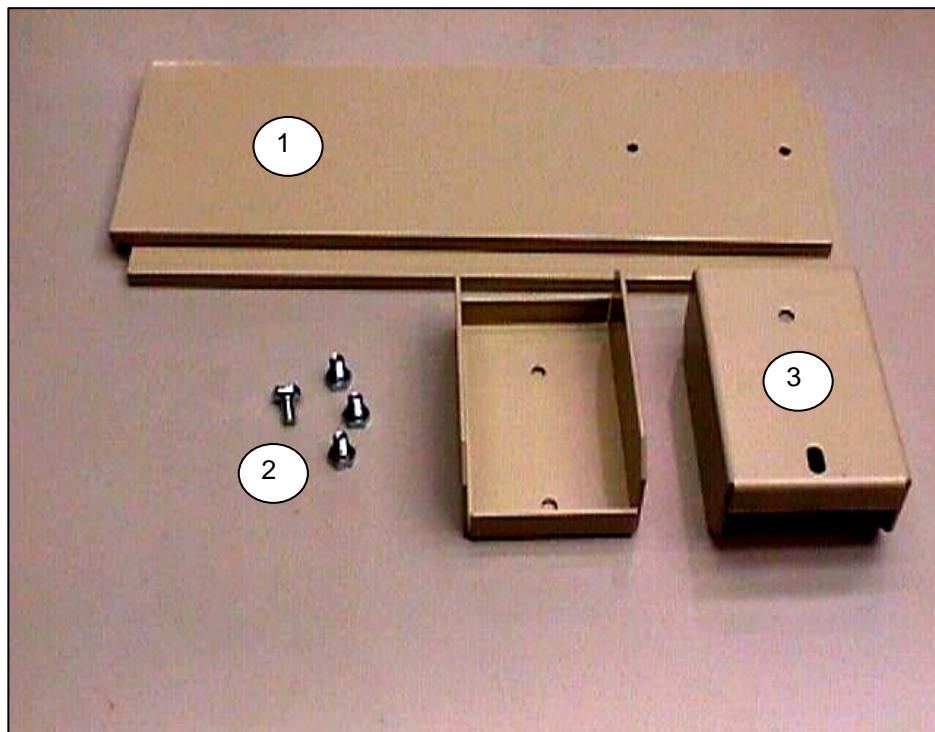

1. 30-10525-01 Base Plate, .375 X 5 X 13.5 HDTL (2) pieces
2. 02-340 Hex Head Bolt 1/4" - 20 X 1/2" (4) pieces
3. 30-10534-01 Bracket Retainer, Steel Feet, PM (2) pieces

PM-HDTL SHELVING FEET ASSEMBLY



Step # 1

After removing the packaging, lay the unit on its back using a blanket or if the floor has a carpet it will be just fine. This is the way you will receive the base plate, attached to the bottom of the unit.




Step # 2

Remove the two bottom shelves from the unit to have enough room to remove and install the base plate.




Step # 3

You will need a 7/16" Socket with a ratchet or any type of tool you wish to use, to remove the bracket retainer. Remove the two 1/4" -20 X 1/2" hex head bolts P/N:02-340 holding the base plate from the other side .

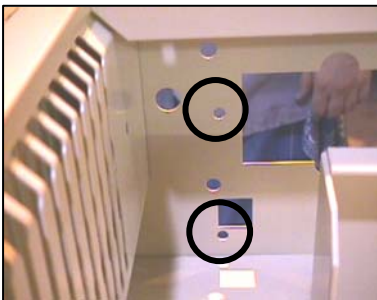

Step # 4


Locate the two punched holes where you will be installing the base plate.
(Shown inside circles)

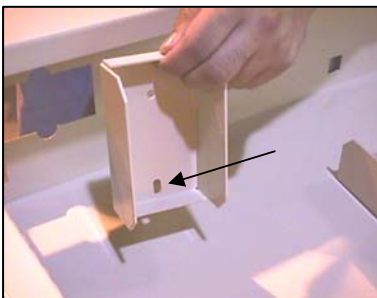

Step # 5

Place the bracket retainer as shown in picture.
"See detail the oval punch goes towards the bottom of the unit".

PM-HDTL SHELVING FEET ASSEMBLY

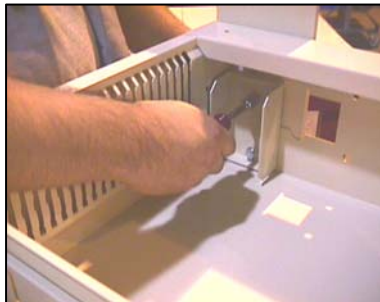

Step # 6

Insert the 1/4" - 20 bolts and place the base plate outside the unit with the pre-threaded side towards the bottom.



Step # 7

Secure the base plate by fastening the two bolts. Follow the same steps to install the base plate on the opposite side.



Step # 8

This is a view of how the unit will look after installation is complete.



Step # 9

Reinstall the shelves back into the unit.



Step # 10

Stand it up to vertical position.
(Unit shown without shelves)